

## Descaling **Auto-LCD Display** (signal descale reset)

Descaling is as important as changing the oil in your car every 3,000 miles. It is a process that eliminates mineral build up inside your boiler and ensures the machine's longevity. For normal household use we recommend descaling at least once every 3 months, depending on the volume of use and hardness of your local water supply.

There are many good descaling agents on the market today including Saeco's own product: Part number 524000, 3 packets, \$4.90 plus \$5.90 shipping and handling. Any descaling product used with Saeco machines should be citric based. Do not use vinegar or lemon juice as this will cause damage to the machine.

**Tip:** To ensure that the descaling solution completely dissolves, mix 1 packet of descaling solution with 1 cup of water, stir until powder is completely dissolved and pour into the water tank. Then add additional 3 cups of water.

### **WARNINGS**

Do not swallow. Avoid eye contact. Wash hands after use.  
Do not expose to heat. Keep out of reach of children.  
This product is non-toxic, biodegradable and odorless.

### **Step by Step**

For use with Royal Professional, Magic Comfort Plus, V'spresso and Vienna Digital.

1. Start with the machine turned off.
2. Remove the Aqua Prima water filter from the tank and fill with the descaling solution. (1 packet of Saeco descaling solution to 4 cups of water.)
3. Turn the machine on, press menu button, scroll to the descaling function and press menu again to select.
4. Open the steam knob to start the descaling process.
5. The machine will run the solution at intervals until the water tank is empty. Then the display reads "Descaling Finished", close the knob.
6. Rinse the water tank thoroughly and refill with clean water.
7. To rinse the machine, press menu button and open the steam knob.
8. When water tank is empty, close the knob.
9. Press menu button and scroll to the "Signal Descaling" function. Press menu twice to reset the descaling signal and confirm your choice.
10. Press "ESC" to exit the menu.

**For questions or concerns please contact Saeco Customer Service at 800.933.7876 or email at [support@saeco-usa.com](mailto:support@saeco-usa.com).**